Arrester Bracket

User Instructions

(Original Instructions) Issue 01

This bracket enables the G.Saver II or G.Stop models of fall arresters to be securely fitted to a section of 48.4mm diameter.

The anchorage strength requirements stated on the G.Saver II/G.Stop must be maintained.

Regulation EU 2016 425






: +44 (0) 1691 654 966

⊠: info@globestock.co.uk

: www.globestock.co.uk

t: @globestock ltd

Globestock Limited, Mile Oak Industrial Estate, Maesbury Road, Oswestry, Shropshire, SY10 8GA UK

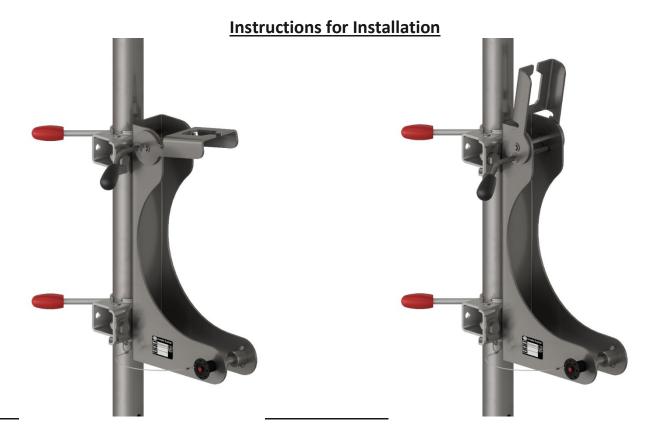

Open the clamps and fit the bracket to the tube section and fully tighten.

Undo the top bracket handle to allow the top bracket to open, remove the hand nut from the lower pin and slide out



If installing a G.Saver II product ensure the handle is to the right side to prevent it clashing with the handle of the bracket.

When closing the top bracket make sure the trigger pin ring is accessible.

Fit the pin through the bracket and the fall arrester, lower the upper bracket and tighten the handle.